


IC カードリーダーをセットするときの注意事項


IC カードリーダーの RICOH ロゴがある面を下向きにして、IC カードリーダーの 2 辺を USB ハブ基板とコネクションボックス上側の黒いゴムに押し当ててください。

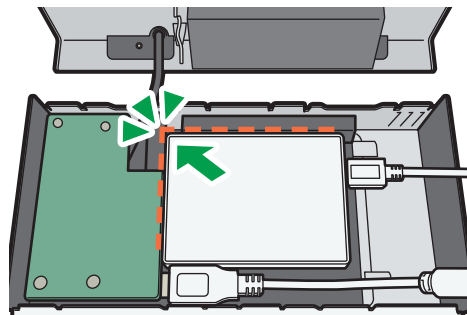


EDV001

USB ケーブルをセットするときの注意事項

『設置手順書』のイラストに誤りがありました。
USB ケーブルは以下のようにジグザグに束ねたうえで、コネクションボックスにセットします。
ループ状には束ねないでください。ループ状に束ねると、IC カードリーダーが誤動作する原因になります。

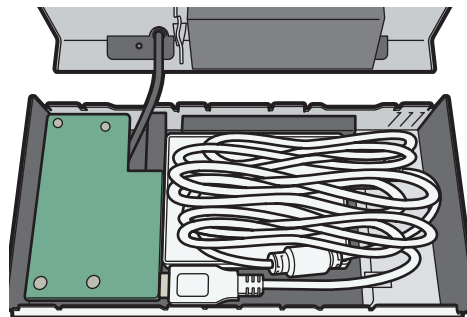

EDV002

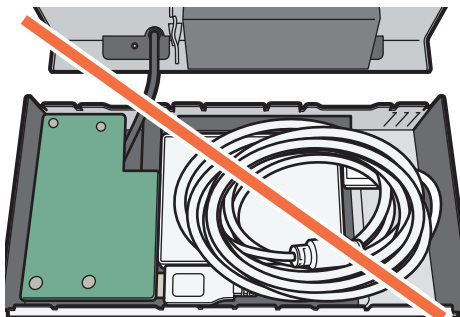


EDV003

※ USB ケーブルをセットするときは、USB ハブ基板側にはみ出したり、カバーからはみ出さないように注意してください。カバーを閉じるときに挟まることがあります。

Cautions When Installing the IC Card Reader


Place the IC card reader in the connection box so that the surface with the "RICOH" logo faces down. Note that the two sides of the IC card reader are pushed against the black rubber on the USB hub board and the upper side of the connection box, as shown below.

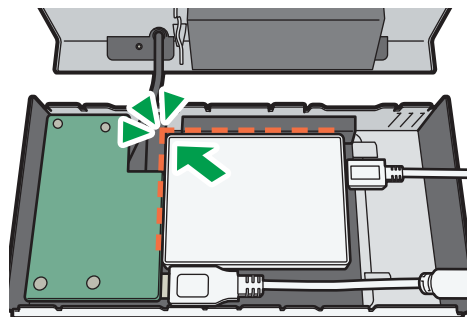


EDV001

Cautions When Connecting the USB Cable

Note the following corrections to the illustration in "Installation Guide". When connecting the IC card reader's USB cable to the USB port in the connection box, bundle it in a zigzag pattern, as shown below. Do not coil it in loops. Doing so may cause the IC card reader to malfunction.

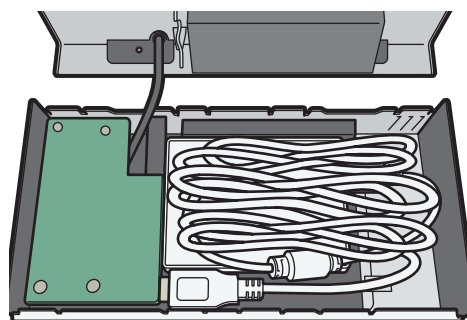

EDV002

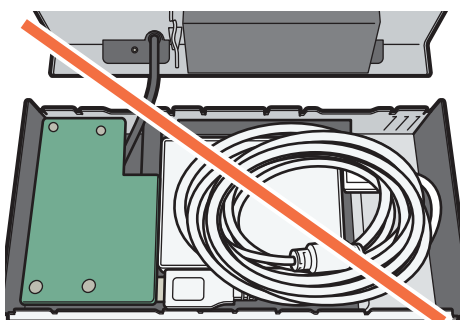

EDV003

* When connecting the USB cable, keep the extra cable off the top of the USB hub board and do not let it protrude out of the connection box. Otherwise, the cable might be pinched in the cover when the connection box cover is closed.